

NEW 100% Real Wood Plankfloor 100% Solid Hardwood Throughout

Wear Layer 13mm (over 1/2" - far higher than engineered/semi-solid wood flooring and most laminate flooring).

EASY TO LAY



The beautiful warm colour of walnut

Far superior to laminated melamine flooring and other wood flooring because...


- All natural timber hardwood (no MDF)
- 13mm (1/2") thickness
- 5 coats of semi-matt/satin lacquer for maximum durability - can be re-coated after a number of years if necessary
- 25 Year Warranty against complete wear
- A unique feature is that planks have a micro-bevel

nicoline

- STORE HORIZONTALLY
- FIX IMMEDIATELY ON OPENING

Contents: 5 Planks - Length 1200mm, Width 150mm
Coverage: 0.9 Square Metre (Approx. 10sq.ft)

NICOLINE 100% SOLID WOOD PLANKFLOORING is guaranteed for 25 Years against complete wear.

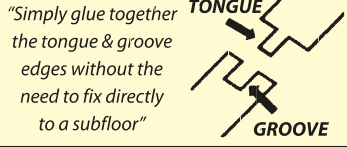

Directions:

Please follow these instructions, even if you have previous experience of laying plankflooring.

You will need:

1. Fine saw, hammer, measure
2. Nicoline plank adhesive for gluing along the tongue and groove edges
3. Cork expansion strips, perimeter mouldings if preferred and door threshold plates to secure adjoining carpets etc.
4. Spacers or wedges to allow gap between edges of Plankflooring and skirting boards/room perimeter
5. A tapping block to secure the joints of the plankflooring after gluing
6. Underlay insulation rolls to place underneath the plankflooring for sound absorption

PREPARATION









1. The product is a floating floor (not to be glued or nailed down to the subfloor). Store the packs flat horizontally at all times.
2. Fix immediately after opening packs. Do not leave loose Planks open from their packs.
3. Remove the existing skirting boards (and replace after the plankfloor has been laid and fixed) or leave spaces along the perimeter for expansion.
4. Check entrance doors will be able to open with the thickness of insulation rolls and plankfloor. If necessary, plane bottom edge of doors (see diagram 1, right).
5. Plankfloor is suitable for all rooms except bathrooms, laundry rooms and other high humidity areas.
6. Proceed only in warm, dry conditions. Any other 'wet trades' eg. plastering, floor screeds etc., should be completed and ventilated a few weeks before beginning to lay your Plankflooring.

FIXING/LAYING

1. Loose-lay the Plankflooring first to check measurements, especially around pipes to be cut etc. Saw the planks varnished side up and measure allowing for for tongue and groove joints (see diagram 2).
2. The subfloor must be dry, flat, smooth and level. There must be an effective Damp Proof Membrane and new concrete must be at least six months old.
3. Lay the insulation rolls over the existing subfloor surface which will act as a 'sandwich' with the Plankfloor (see diagram 3).
4. Glue inside of tongue and groove edge (see diagram 4). Remove any excess glue immediately with a damp cloth. Then place into position securely using a lightweight hammer and block, taking care not to damage the tongue and groove edges (see diagram 5). The planks nearest to the border perimeter may need bracing into the next plank to maintain the clearance of the expansion gap (see diagram 6). (The planks are not glued or nailed to the surface of the subfloor underneath).
5. Lay at alternate staggered lengths (see diagram 7).
6. Keep spacing blocks or wedges in position for several hours to allow tongue and groove adhesive to dry and harden for maximum bond strength (see diagram 8).
7. Replace existing or fit new skirting boards to cover the expansion gap or fit with Cork Expansion Strips (see diagram 9). Fit a quadrant moulding over the expansion strip if preferred.
8. Room temperature must be maintained at all times.
9. The Plankfloor will take foot traffic 24 hours after gluing and fixing.
10. It is a moving and floating floor and allowance should be made for expansion and contraction by leaving gaps around all perimeter borders, pipes, door thresholds etc. and lengths of 10 metres or more will need expansion joints.
11. A unique feature of the Plank is that joints are micro-bevelled.

MAINTENANCE & AFTERCARE

1. To maintain the floor, simply vacuum or wipe dry occasional spills with a damp cloth. Do not wet mop. Occasional polishing and the use of a recognised floor cleaner is recommended.
2. If occasional touching up is required, lightly sand the affected area and reapply with a similar sealer.
3. Cover high risk areas and entrances with a suitable doormat. Use soft protective pads under chair and table legs etc., and replace pads as necessary.
4. Protect the floor from strong sunlight by using curtains or blinds when necessary and avoiding very high temperatures.
5. The planks are ready sealed and no other varnishing is required.
6. Everyday dust and dirt are a floor's worst enemy so it is essential to dust mop, vacuum or sweep regularly.
7. This product is scratch-resistant and not scratch-proof, so please follow the above information on a continual basis.

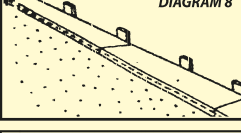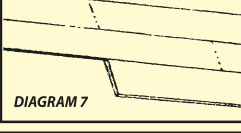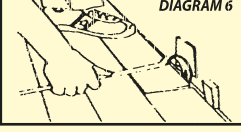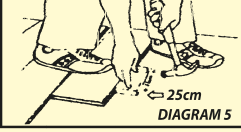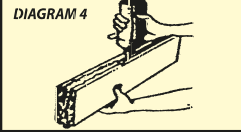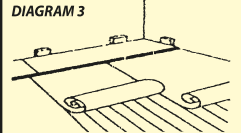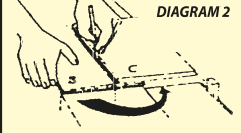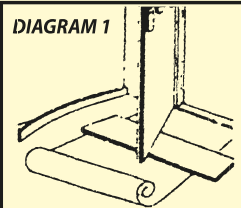

NOTE
Real Wood Plankflooring is a natural product, hygienic and easy to maintain. We recommend that you retain this label for further maintenance and aftercare information.

CONDITIONS OF SALE

1. A size tolerance of +/-1% and some colour and grain variation should be allowed for. As natural timber matures areas of uneven colouring will gradually blend in together.
2. Due to limitation in printing and colour processes we advise to check actual finishing before completing the remainder of the floor for final colour appreciation.
3. Plankflooring is sold on a supply only basis and we are unable to accept liability for individual laying. Laying instructions are for general guidance only. Our liability is limited as we are not aware of every household circumstances in which our products are stored or laid with regard to shrinkage, expansion etc.
4. Product descriptions are correct at time of printing. Our policy, however, is one of continual development and we reserve the right to amend specifications and/or appearance without prior notification.
5. Natural timber floor may be affected by changes in room temperatures etc., it is recommended that there are no direct sources of heat applied and any changes in room temperature are made gradually.
6. Non observance of our pack instructions will invalidate any claim. Any alleged manufacturing defect must be notified to the retailer prior to fixing for our examination. In the event of a proven manufacturing defect the liability shall not exceed the price of the section purchased. No responsibility will be accepted for any additional or consequential costs or losses howsoever caused.

nicoline NEW 100% Solid Hardwood Plankflooring

The beautiful warm colour of walnut Ready Sealed - 0.9m²

How many packs do I need?

ROOM WIDTH	ROOM LENGTH	2M (6'7")	3M (9'10")	4M (13'1")	5M (16'4")	6M (19'6")	7M (23')
2M (6'7")	5	8	10	13	15	18	26
3M (9'10")	8	11	15	19	22	26	35
4M (13'1")	10	15	20	25	30	37	43
5M (16'4")	13	19	25	31	37	44	51
6M (19'6")	15	22	30	37	44	51	59
7M (23')	18	26	35	43	51	59	67

It is normal to allow for approximately 10% installation wastage when calculating the number of packs required. This wastage has been included into the calculations illustrated in the table above.

nicoline



NO GLUING OR NAILING DIRECTLY TO SUBFLOOR. This is a floating floor system that requires using glue to the tongue and groove sides. Underlay is required to use on the subfloor prior to laying.